

Retuning instructions for DSE FreeviewHD receivers

Model: G7503

Press **MENU** on your remote control to display the **Main Menu** screen on your television.


Use the arrow keys on the remote to move through the menu and the **ENTER** button to choose your option. Press **EXIT** or **MENU** to return to the previous menu.

Select **Installation**



On the installation page, highlight **Auto Scan** and press **ENTER** to start the retuning process.

Once a digital television channel is found, the channel number and the programme name will be displayed.

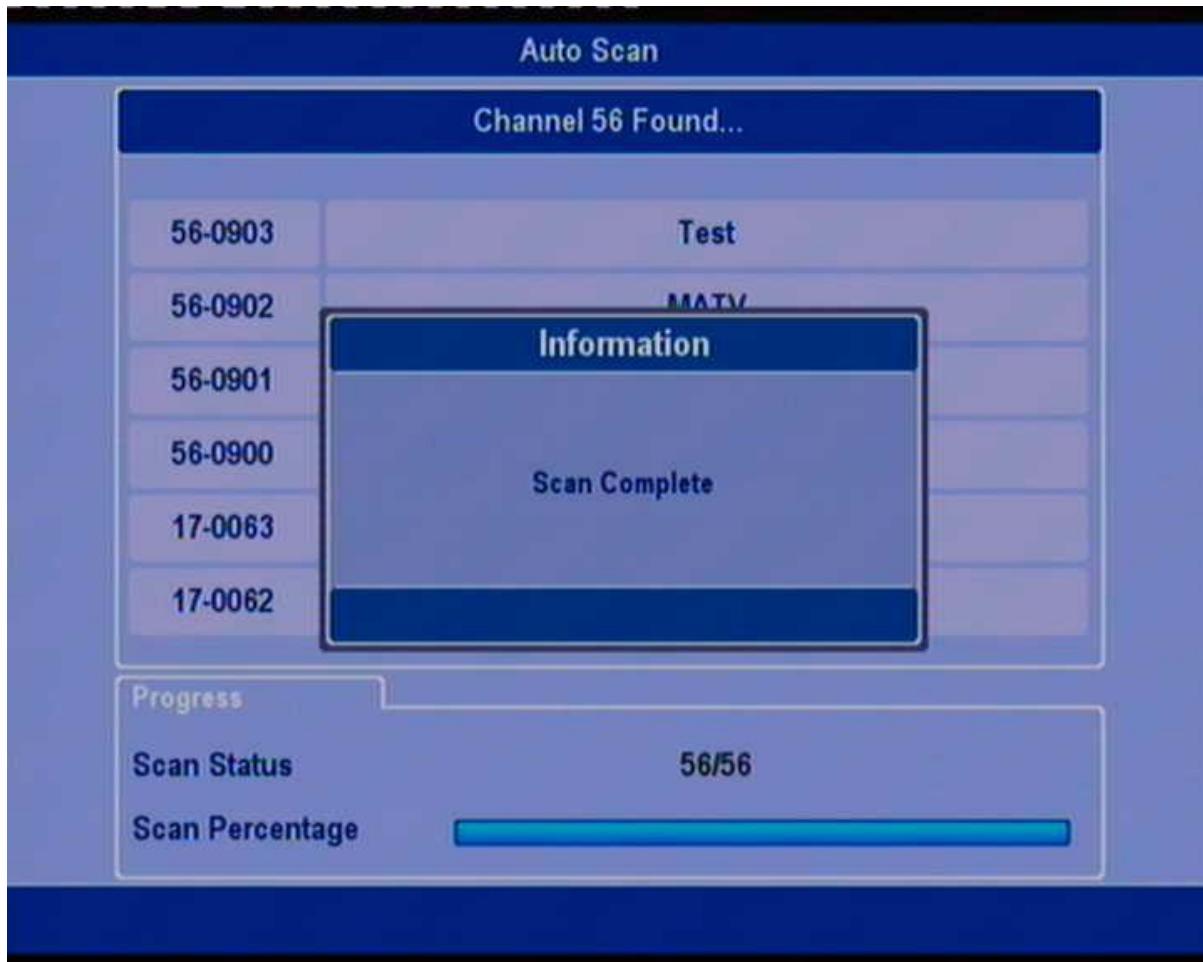

Scan Complete will appear once scanning is finished and television channel frequencies have been retuned. Press **EXIT** or **MENU** to leave the onscreen menu

Note: If a password is requested, the default password of this receiver is 0000.