

Retuning instructions for Panasonic televisions with integrated FreeviewHD receivers

Note: In most cases Panasonic televisions should retune themselves after the Freeview HD frequency changes take place

Once scanning is complete your television channel frequencies will have been retuned. Press **EXIT** to leave the onscreen menu.



Preparations:

1 Select Digital TV or Analogue TV



2 Display the menu




3 Select [Setup]





- The selected mode is displayed on the screen

■ When you select Digital TV

1 Select [Digital TV Tuning Menu]

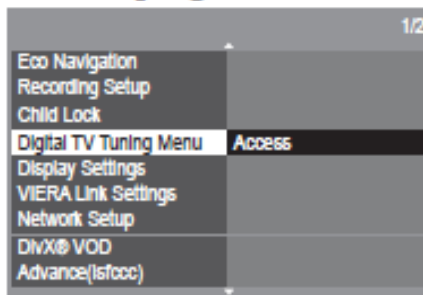

2 Select a function

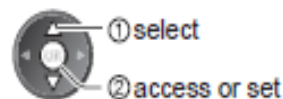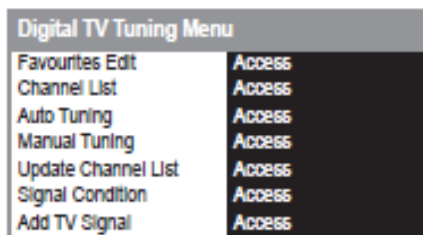


■ To return to TV

EXIT




[Auto Tuning] - Set all Digital TV channels automatically

 1 Start Auto Tuning

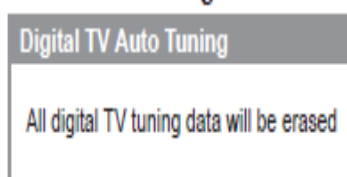

2 Settings are made automatically

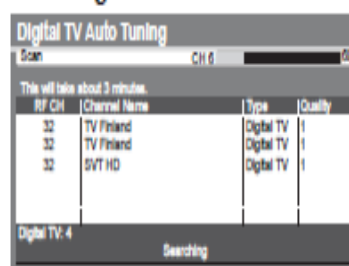 

Automatically retune all Digital TV channels received in the area.

- All the previous tuning settings are erased.
- When the operation is completed, the channel at channel position [1] will be displayed.
- Search begins in the order from the lower channels to the higher channels.
- If tuning has not been done completely → [Manual Tuning]