


Retuning instructions for Sanyo FreeviewHD receivers

Press **MENU** on your remote control to display the **Main Menu** screen on your television.

Use the arrow keys on the remote to move through the menu and the **OK** button to choose your option. Press **EXIT** to return to the previous menu.

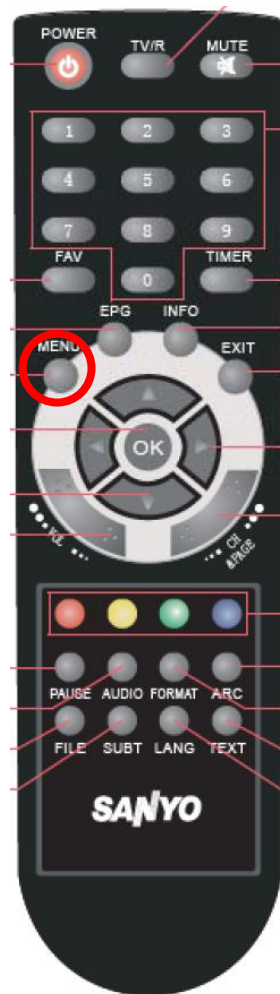

Select **Setup**, press **OK**.

Select **Tuning**, press **OK**.

Press the down arrow until you have selected **Search Mode**.

Press the left or right arrow to cycle through the options until **Auto** appears. Press **OK** to start the retuning process.

Once scanning is finished your television channel frequencies will have been retuned.

When the message 'Scan Completed' appears press **OK** to save the settings and then press **EXIT** 4 times to leave the onscreen menu.

Note: If a password is requested, the default password of this receiver is 0000.