


# Retuning instructions for Sony televisions with integrated FreeviewHD receivers

Press **HOME** on your remote control to display the **Home Menu** screen on your television.

Press **← / →** to move through the menu and the **+** button to choose your option.

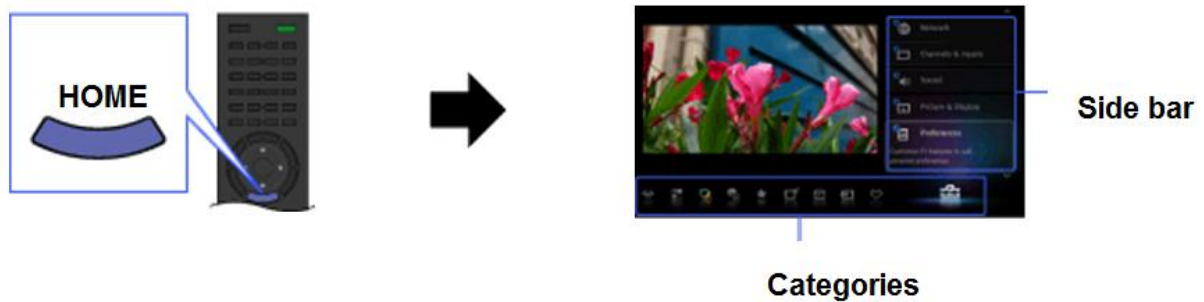

Select **Settings**.

Press **↑ / ↓** to move through the Settings menu and select **Digital Set Up**.

Select **Digital Auto Tuning**.

Once scanning is complete your television channel frequencies will have been retuned. Press **HOME** to leave the onscreen menu.