
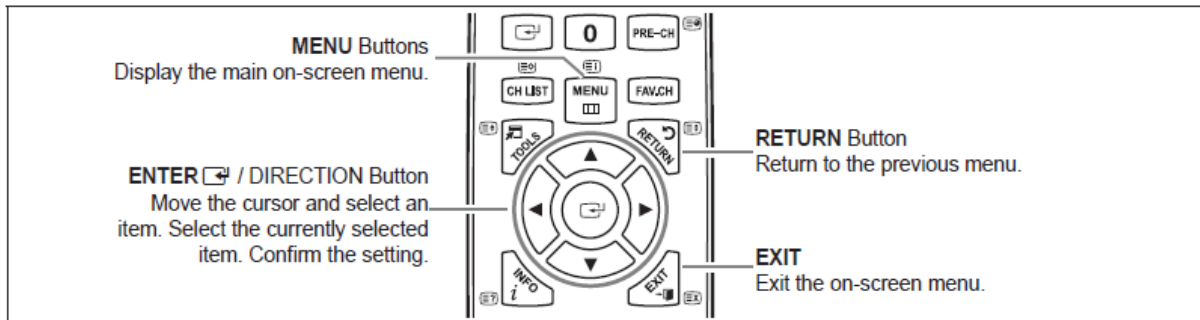


Retuning instructions for Samsung televisions with integrated FreeviewHD receivers

Press **MENU** on your remote control to display the **Main Menu** screen on your television.

Use the arrow keys on the remote to move through the menu and the  button to choose your option. Press **RETURN** to return to the previous menu.



Select **Channel**



Select **Auto Store**.

Select **Digital** press the  button to start the retuning process.

Once scanning is complete your television channel frequencies will have been retuned. Press **EXIT** to leave the onscreen menu.