


# Retuning instructions for Sommet FreeviewHD receivers


Press **MENU** on your remote control to display the **Main Menu** screen on your television.

Use the arrow keys on the remote to move through the menu and the **OK** button to choose your option. Press **EXIT** to return to the previous menu.

Select **Installation**

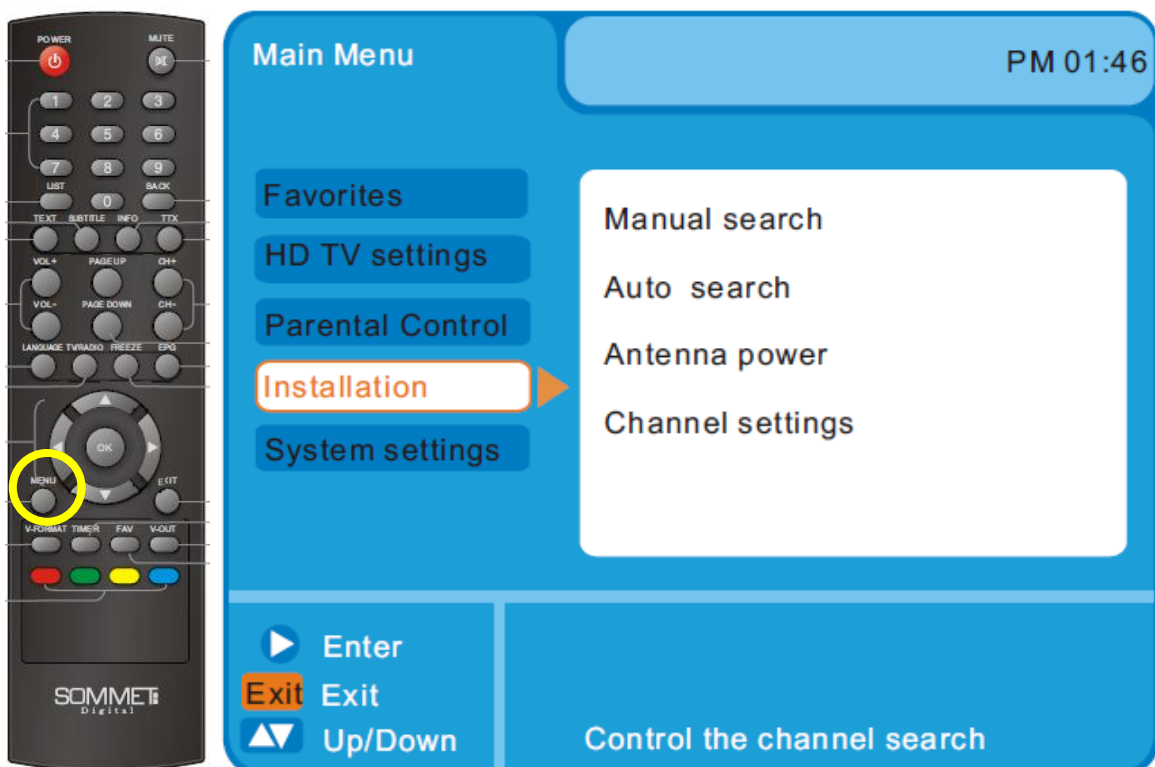

On the installation page, highlight **Auto Search** and press **ENTER** to start the retuning process.

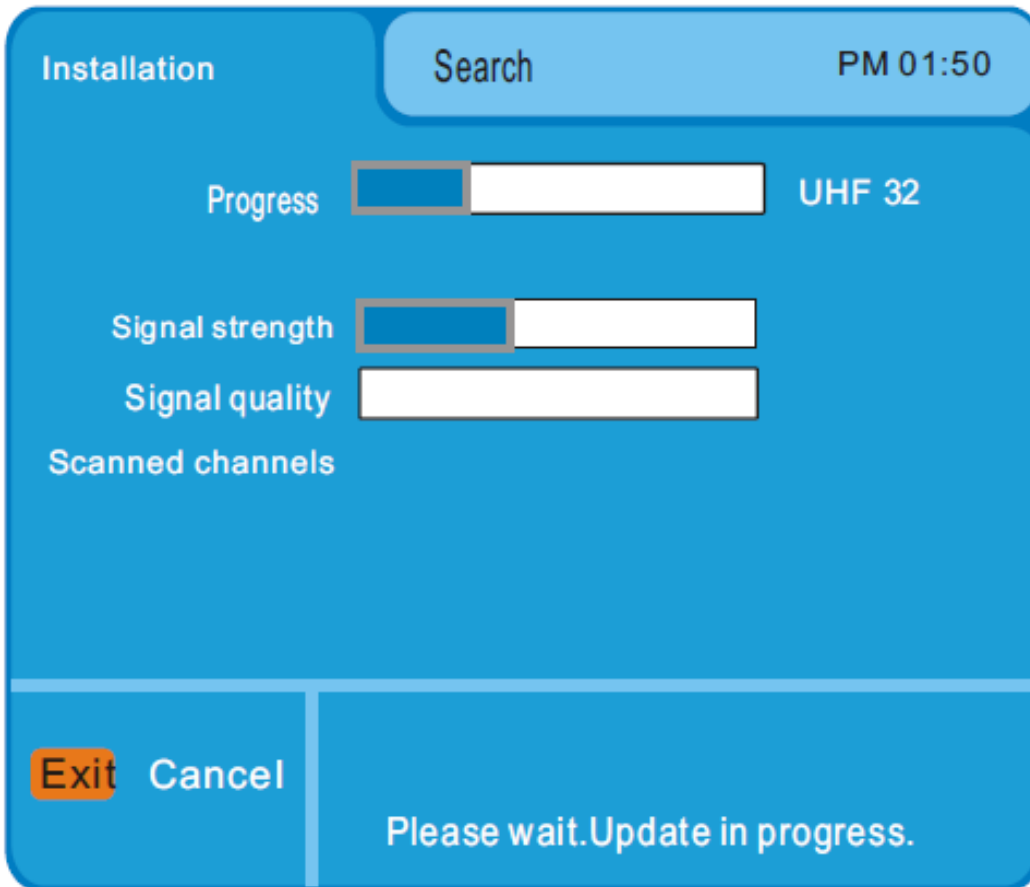

Once scanning is complete your television channel frequencies will have been retuned. Press **EXIT** to leave the onscreen menu