

# Retuning instructions for DishTV FreeviewHD receivers

## T1020

Press **MENU** on your remote control to display the **Main Menu** screen on your television.

Use the arrow keys on the remote to move through the menu and the **OK** button to choose your option. Press **EXIT** to return to the previous menu.



Select **Installation**.

Select **Tuning Wizard**

Enter the password

Select **Auto Scan**.

Select **Yes** to start the auto scan.

Once scanning is finished your television channel frequencies will have been retuned. Press **EXIT** to leave the onscreen menu.


Note: If a password is requested, the default password of this receiver is 0000.

# Retuning instructions for DishTV FreeviewHD receivers

## T1000

Press **MENU** on your remote control to display the **Main Menu** screen on your television.

Use the arrow keys on the remote to move through the menu and the **OK** button to choose your option. Press **EXIT** to return to the previous menu.

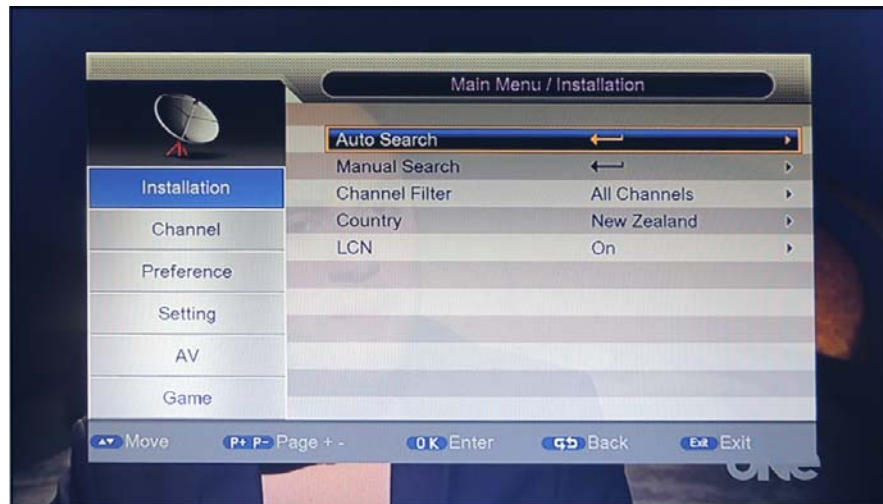

Select **Installation**.

Enter the password

Select **Auto Search**.

Select **Yes** to start the auto search.

Once scanning is finished your television channel frequencies will have been retuned. Press **EXIT** to leave the onscreen menu.

Note: The default password of this receiver is 0000.