

AT A GLANCE

 
EDUCATOR'S QUICK START GUIDE FOR THE ENO BOARD (w/ new icon strip)

You have access to an ēno interactive whiteboard. How do you make the interactive board work? Follow these steps to get started.



eno App icon

STEP 1: Install eno app/driver on computer. You may download the free app from <http://techsupport.steelcase.com/home/downloads>

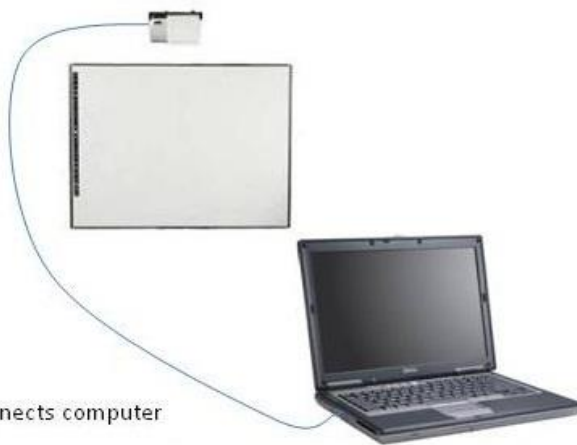


STEP 2: VGA cable connects computer to projector.

Step 4: Uncap stylus, press button on BT receiver to pair stylus to receiver. Watch computer screen for pairing progress.




STEP 3: Plug USB eno Bluetooth (BT) receiver into any USB port. Pen/stylus communicates with receiver via BT.

 STEP 5: Calibrate the ēno board: Uncap the ēno stylus and briefly hold the tip on the surface of the ēno board for about 1 second, then lift. A “green screen” with an “x” target appears. Tap the CENTER of this target and the additional eight targets will appear. Your computer desktop will reappear. Tap the stylus tip against the board in different location; the cursor arrow should appear wherever the stylus tip makes contact with the board.

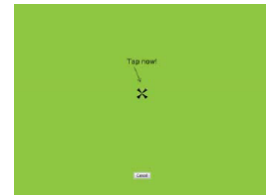

 STEP 6: Tap the “gear” icon on the ēno magnetic icon strip (third up from the bottom). This opens the ēno app. Tap the “user settings” tab on the left. Locate “Fixed Projector” and tap the on/off button to turn this setting ON, which will permanently set the calibration. You will not need to recalibrate again unless the projector or ēno board are moved.

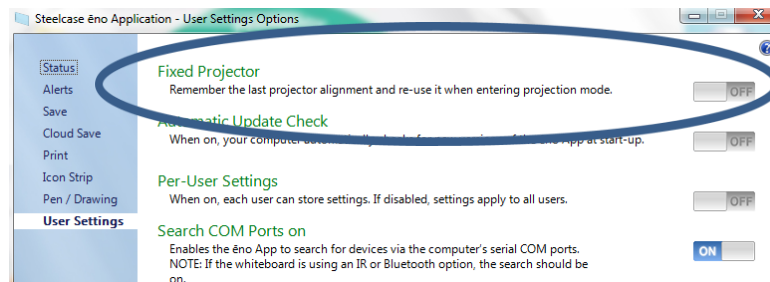

The eno stylus works in one of three modes—cursor/mouse mode (use it just like your computer’s mouse/mouse pad), pen/mark-up mode (annotate, write, draw on whatever you have open on your desktop), white screen mode (up to 99 blank white screens you and students can use to demonstrate, practice, create, and brainstorm).