

AT A GLANCE

STEELCASE ĒNO RECEIVER

What is different about the new Ēno receiver? There is a Bluetooth stack on the receiver allowing you to pair the stylus to the radio and not the computer. The receiver is not reliant on the operating system's Bluetooth, making pairing easier and improving connectivity. A button built into the device pairs and un-pairs the Ēno stylus from Bluetooth radio.



You will need to download the updated version of the Ēno driver (3.2) at <http://techsupport.steelcase.com/home/downloads>

Operation

1. Plug receiver into USB port – LED cycles red, blue, then green
2. Remove stylus cap
3. Press the button on receiver
4. LED flashes green for 30 seconds while receiver searches for stylus
5. LED turns green or red to indicate result

Un-pairing:

1. Push and hold the button on receiver for ten seconds to un-pair all styluses

LED indicators while connecting

- Flashes green quickly 5 times = pairing successful
- Flashes red quickly 5 times = pairing fails (remove receiver from USB port, wait 5 seconds, then repeat operation steps listed above)
- Cap removed from stylus, receiver flashes green 3 times = connection successful
- After successfully pairing, if cap is removed and receiver flashes red 3 times = connection failed

LED indicators during use

- LED flashes red 2 times = no stylus/stylus has timed out
- LED solid blue as long as driver is running and radio is plugged in = host connected
- LED flashes blue = data is streaming successfully to the radio
- LED solid red = driver is not running/no host

Helpful note: The stylus and new Steelcase Ēno receiver maintain pairing until un-pair process is completed. Therefore, ANY USB port on ANY computer can be used with the same stylus and receiver without re-pairing them.

Do you have other questions about the Steelcase Ēno receiver?

Contact technical support at 800-334-4922 or techsupport@steelcase.com