 
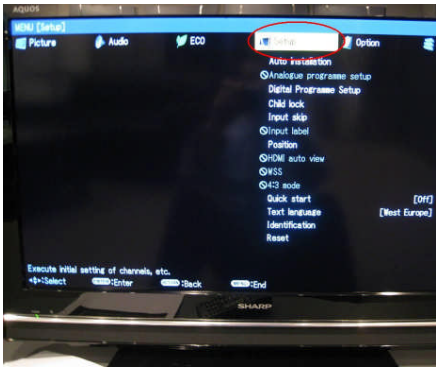 


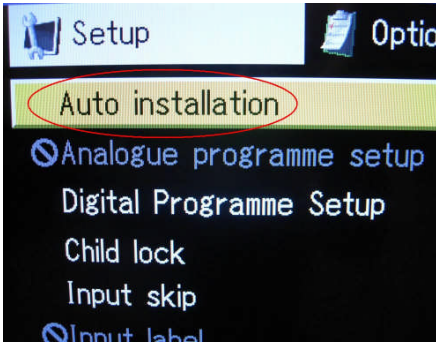

SHARP

Freeview Channel Retuning


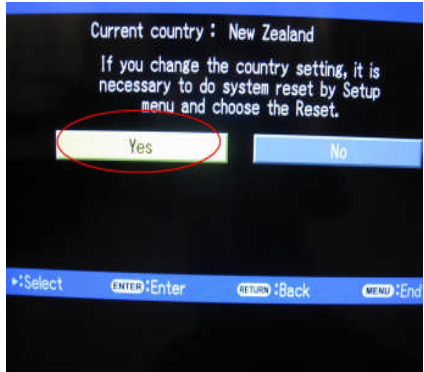




LC19LE520X/LC22LE520X

LC32L400X/LC32L450X/LC40L500X/LC40L550X/LC40L650X

1	Press the “DTV” button	
2	Press the “MENU” button to display menu.	
3	Use the ◀▶ buttons to select “Set up” and press enter.	
4	Use the ▲▼ buttons to select “Auto installation” and press enter.	
5	Skip step 5 and go to step 6 if the password request is not displayed. Enter your password (if you can't remember your password please refer to your operation manual).	



The image shows a Sharp remote control. The MENU button is circled in red. The DTV button is also circled in red. Other buttons visible include POWER, DISPLAY, SLEEP, AV MODE, MPX, TV/VIDEO, 0, 1-9, VOL, WIDE, PC, CH, FREEZE, ENTER, EXIT, RETURN, R, G, Y, B, EPG, GUIDE, INFO, RADIO, ATV, and SHARP.
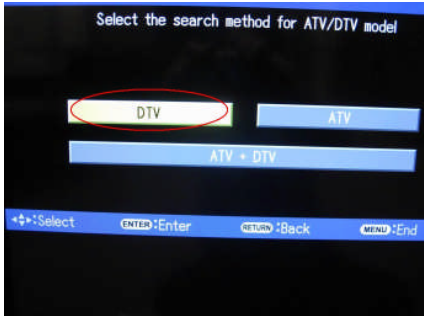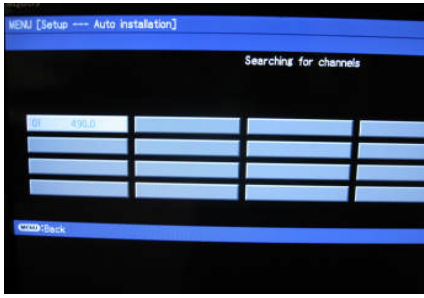
<p>6</p>	<p>Use the  buttons to select “Yes” and press enter.</p>	
<p>7</p>	<p>Use the  and  buttons to select “DTV” and press enter.</p>	
<p>8</p>	<p>The TV will then display the channel search progress</p>	
<p>9</p>	<p>When finished searching the TV should display a TV picture and the menu</p> <p>Press “Menu” to exit</p>	