

1. Press Menu button on remote
2. Press OK on installation
3. Press OK on Auto search

---

---

## 3 Installation

---

---

There are two kinds of Installation mode as follow:

1. Auto Search
2. Manual Search

### 3.1 Auto Search

Auto search is convenient mode to search for programs.

At present, this system covers many target countries and regions including: Newzealand/ Australia/Germany/UK /Italy / France / Spain etc.

1. You can move the cursor to "auto search" via press "LEFT/RIGHT" under "installation menu", then press "OK" to enter into Auto searching page.
2. After entering into auto search page, the system will scan all programs one by one under the frequency of the country/region you are in.
3. To stop and exit scanning, press "EXIT".
4. When all channels are detected and the scanning process is finished, press EXIT to quit the "Main Menu / Installation" page and display the channel to play.

### 3.2 Manual Search

If you know the frequency of the program, you can select manual search.

1. Under "installation menu", move the cursor to "manual search" via press "LEFT/RIGHT", then press "OK" to enter into manual search page.
2. Before beginning the manual search, you need to setup relevant parameters including:
  - (1) Frequency (kHz): Press "up/down", you can select the relevant local Frequency.
  - (2) Bandwidth: Press "up/down", to choose the default bandwidth based on your location.
3. Press "OK" after setting all parameters to start manual scan.  
Move to START SEARCH, then press "OK" to start the manual search.

### 3.3 Channel Filter

All of channels unless unencrypted can be searched through selective settings.

Thomson

T1851