

Promethean Board Calibration

ActivPen - How do I calibrate my Activpen to line up with my mouse pointer?

Applicable to:


All Promethean ActivBoards

All Operating systems


Solution:

There are two easy ways to calibrate your ActivBoard.

- With your mouse on your computer, Click on 1. The **Promethean / ActivManager icon** in the system tray / tool bar of your computer, and 2. **Select "Calibrate"**:

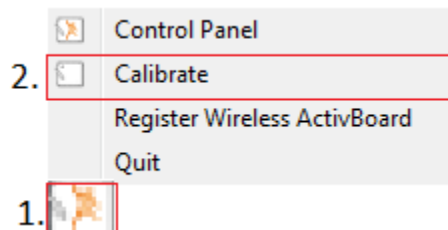

- For 2nd Generation / 300 Series / 500 Series ActivBoards, hover the pen over the white L.E.D in the top left hand corner of your ActivBoard:

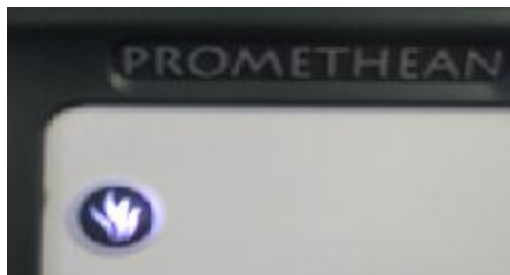

Both ways will then begin the calibration sequence to align your pen up with your mouse cursor. Simply follow the on screen instructions.